



Data Sheet
OML 343DC

Distributed by



[www. BristolInstruments.com](http://www.BristolInstruments.com)

Bristol Instruments
65 Sprague Street
Boston, MA 02136

Toll free
877-866-8500



OML 343DC



Type OML 343DC is an inexpensive programmable 3,5-digit panel direct current VA-meter designed for simple applications with an instrument box depth of only 30 mm.

The instrument is based on a single-chip microcontroller with an A/D converter, which ensures good accuracy, stability and easy operation of the instrument.

DC V-A METER

- 3,5-digit programmable projection
- Range: $\pm 1 \text{ A}/\pm 5 \text{ A}$
 $\pm 120 \text{ V}/\pm 240 \text{ V}$
- Digital filters, Linearization, tare
- Size of DIN 96 x 48 mm
- Power supply 10...30 VDC/24 VAC

- Option
Comparator

OML 343DC
DC VOLTMETER AND AMMETER

OPERATION

The instrument is set and controlled by five buttons accessible from the rear. All programmable settings of the instrument may be performed in three adjusting modes:

LIGHT MENU is protected by optional number code and contains solely items necessary for instrument setting.

PROFI MENU is protected by optional number code and contains complete instrument setting.

USER MENU may contain arbitrary items from the programming menu (LIGHT/PROFI), which determine the right (see, change). Access w/o password.

Standard equipment is the OM Link interface, which together with operation program enables modification and filing of all instrument settings as well as performing firmware updates (with OML cable). The program is also designed for visualization and filing of measured values from more instruments.

All settings are stored in the EEPROM memory (settings hold even after the instrument is switched off).

OPTION

COMPARATOR is assigned to monitor two limit values with relay output. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

STANDARD FUNCTIONS

PROGRAMMABLE PROJECTION

Selection: measuring range

Setting: manual, optional projection on the display may be set in menu for both limit values of the input signal, e.g. input 0...1,00 A > 0...100,0

Projection: ± 1999

FUNCTIONS

Linearization: non-linear signals can be linearized by the means of a linearization table (up to 25 points)

Tare: designed to reset display upon non-zero input signal

DIGITAL FILTERS

Exponential average: from 2...100 measurements

Rounding: setting the projection step for display

EXTERNAL CONTROL

Hold: display/instrument blocking

Tare: tare activation

TECHNICAL DATA

INPUT

Number of inputs	1		
DC	Range	optional in configuration menu	
		±1 A	< 12 mV
	±5 A	< 60 mV	
	±120 V	10 MΩ	
±240 V	10 MΩ		
External input	1 input, on contact		
The following functions can be assigned:			
OFF	input off		
HLD.	display stop		
TAR.	tare activation		

PROJECTION

Display: ±1999, single color 7-segment LED
 Digit height: 14 mm
 Display color: red or green
 Decimal point: adjustable - in menu
 Brightness: adjustable or automatically controllable

PROJECTION

Display: ±1999, red or green 7-segment LED, height 14 mm
 Decimal point: adjustable - in menu
 Brightness: adjustable or automatically controllable

INSTRUMENT ACCURACY

TC: 50 ppm/°C
 Accuracy: ±0,15% of range + 1 digit
 Rate: 0,5...20 measurement/s
 Overload capacity: 2x: 10x (t < 30 ms) - not for > 240 V and 5 A
 Watch-dog: reset after 500 ms
 Digital filters: exponential average, rounding
 Functions: Tare
 OM Link: company communication interface for operation, setting and update of instruments
 Calibration: at 25°C and 40 % r.h.

COMPARATOR

Type: digital, menu adjustable, contact switch-on < 50 ms
 Hysteresis mode: switching limit, hysteresis band (Lim and ±1/2 Hys.) and time (±99,9 s) determining the switching delay
 Output: 1x Form A relay (250 VAC/30 VDC, 3 A),
 1x open collector (30 VDC/100 mA)

POWER SUPPLY

Range: 10...30 VDC/24 VAC, ±10 %, PF ≥ 0,4, I_{STP} < 45 A/1,1 ms, isolated
 Consumption: < 1,8 W/1,9 VA

MECHANIC PROPERTIES


Material: Polycarbonate, incombustible UL 94 V-0
 Dimensions: 96 x 48 x 30 mm (w x h x d)
 Panel cutout: 92 x 44 mm (w x h)

OPERATING CONDITIONS

Connection: connector terminal blocks, section < 1,5 mm²
 Stabilization period: within 5 minutes after switch-on
 Working temperature: -20°...60°C
 Storage temperature: -20°...85°C
 Protection: IP65 (front panel only with a gasket)
 El. safety: EN 61010-1, A2
 Dielectric strength: 2,5 kVAC per 1 min test between supply and input
 4 kVAC per 1 min test between input and relay output
 Insulation resistance: for pollution degree II, measuring cat. III
 power supply > 300 V (PI)
 input, output > 300 V (DI)
 EMC: EN 61326-1

PI - Primary insulation, DI - Double insulation

CONNECTION

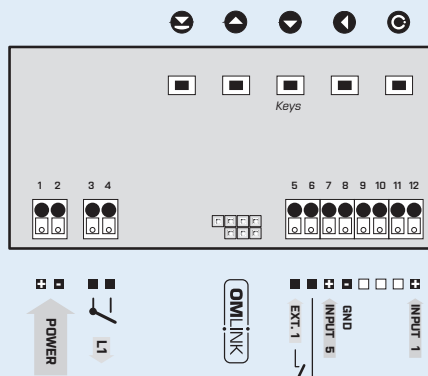

ORDER CODE

OML 343DC

- [] [] [] [] - []

Comparator	no	0		
	1x relay (Form A)	1		
	1x open collector	2		
Display color	red		1	
	green		2	
Gasket	no			0
	Silicone gasket between instrument and panel	yes		1
Specification	customized version, do not fill in			00

Basic configuration of the instrument is indicated in bold.